


it. # 590P3 A AND B  
I.D.

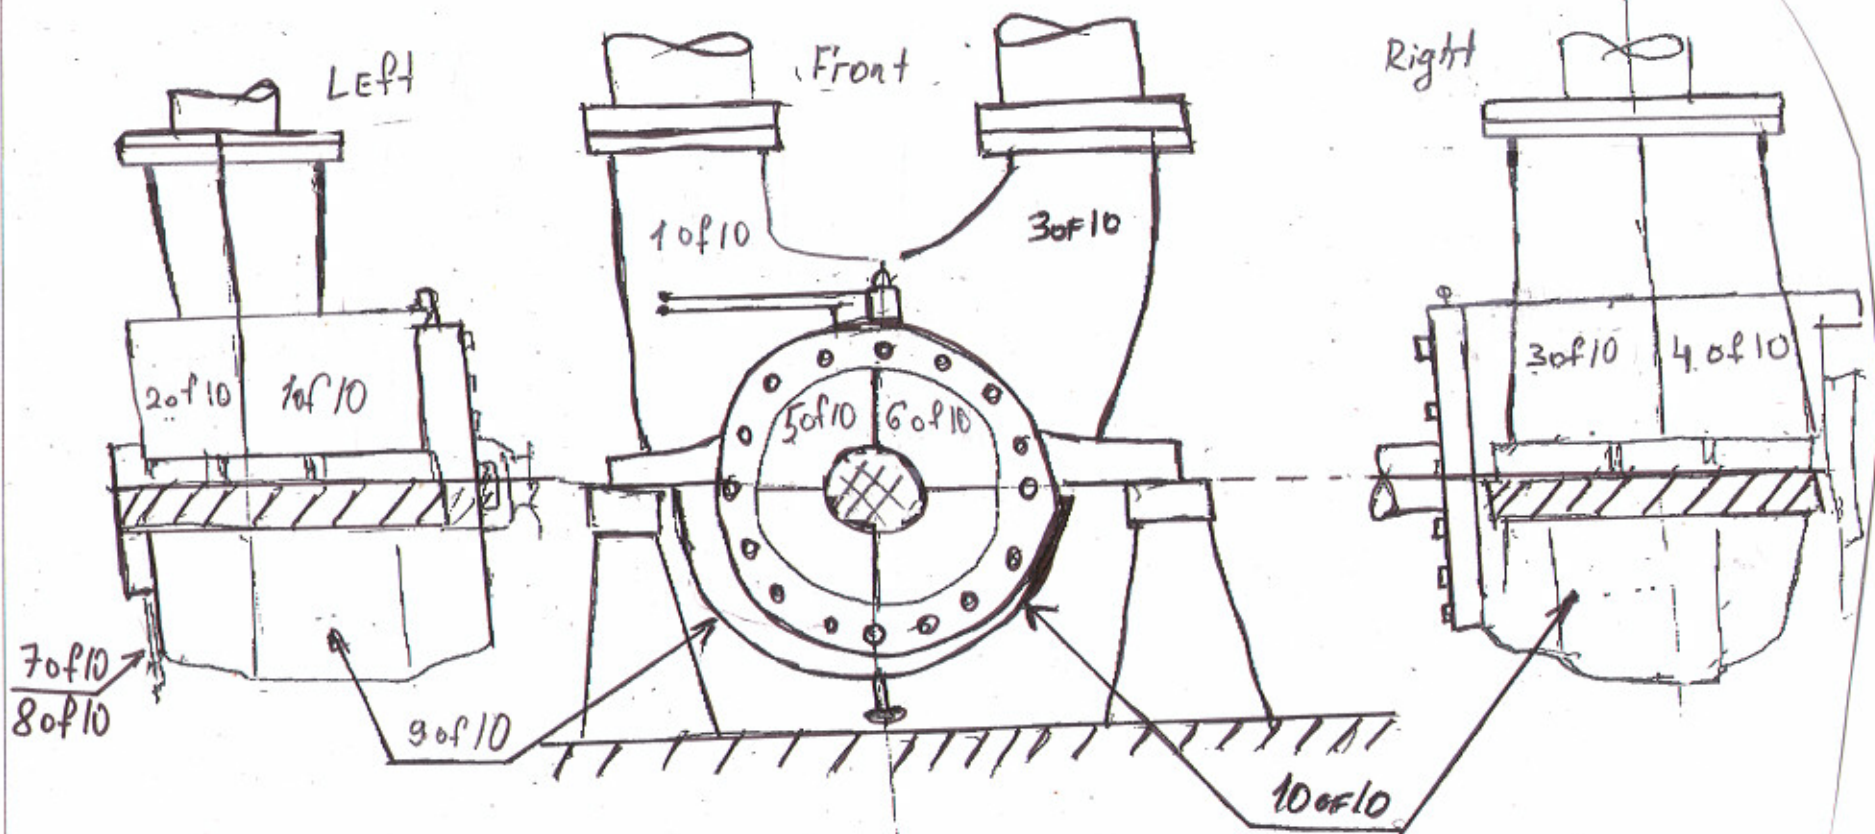

SEQUENCE OF INSTALLATION:

1. SLIDE PARTS 9 of 10 and 10 of 10 UNDER THE PUMP, NO WIRING!
2. INSTALL: 1 of 10 → 2 of 10 → 3 of 10 → 4 of 10 → 5 of 10 → 6 of 10 →  
w/wire → 7 of 10 → 8 of 10 → 9 of 10 →  
→ 10 of 10.



ADVANCE THERMAL CORP.  
548N. YORK RD. (630) 595-5150 BENSENVILLE, IL 60106

Atlantic Plant Services (APS)  
INSTALLATION DRAWING FOR IT#P3A,P3B

DRAWN  
Leo Shukhman  
APPROVED  
A. Lipkind

DATE  
5/5/2010  
DATE  
5/5/2010

DWG. NO.  
20W022069

REVISION  
0